
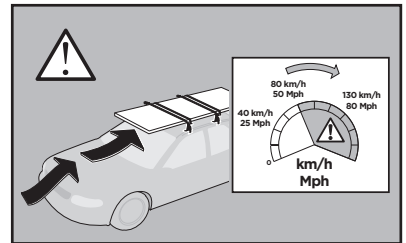
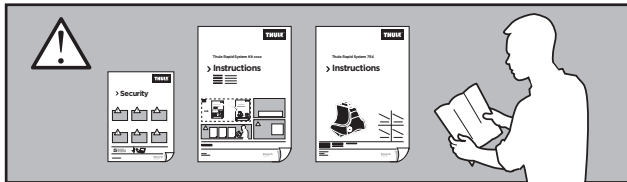
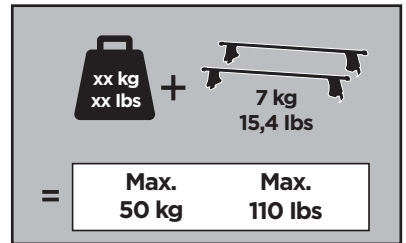






# Thule Rapid System Kit 1498

# > Instructions


TOYOTA Aygo, 5-dr Hatchback, 05-14

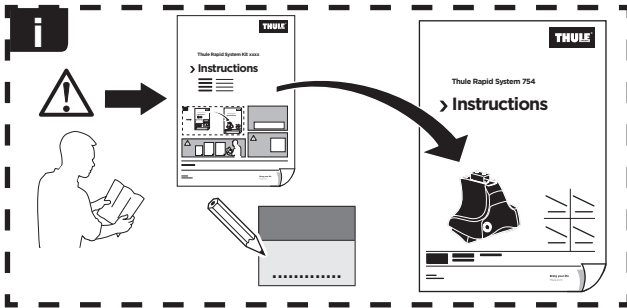

ISO 11154-E

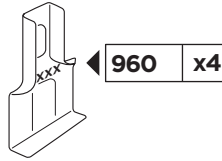



x1



x1

# 1



	X (scale)	X (mm)	X (inch)
<b>TOYOTA Aygo, 5-dr Hatchback, 05-14</b>	<b>28,5</b>	<b>936</b>	<b>36 <sup>7</sup>/<sub>8</sub></b>

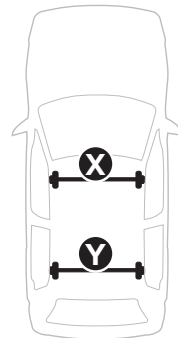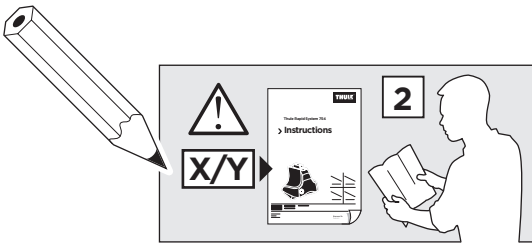


	Y (scale)	Y (mm)	Y (inch)
<b>TOYOTA Aygo, 5-dr Hatchback, 05-14</b>	<b>24,5</b>	<b>896</b>	<b>35 <sup>1</sup>/<sub>4</sub></b>

2

TOYOTA Aygo, 5-dr Hatchback, 05-14

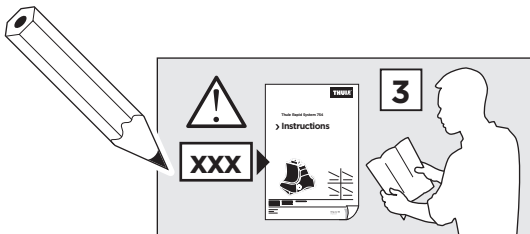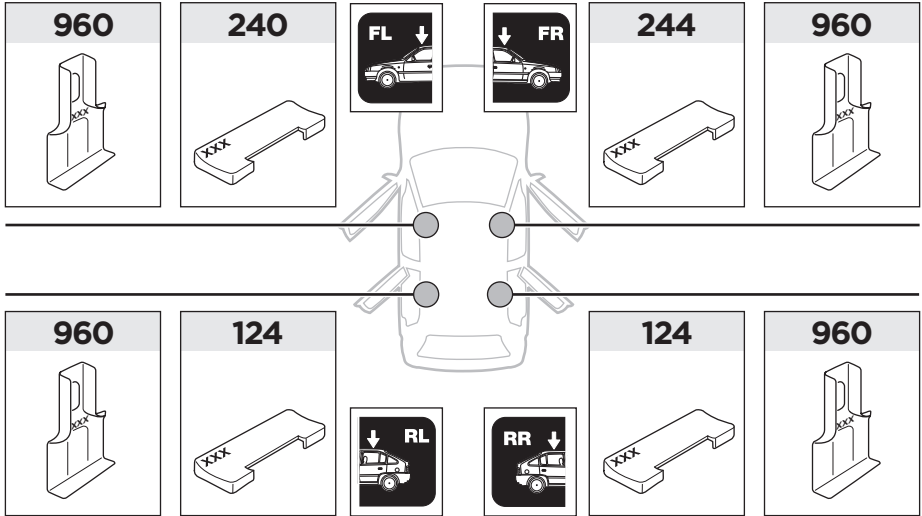

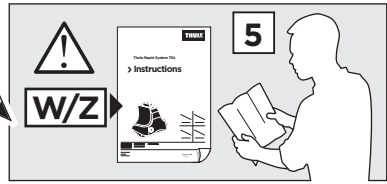**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>TOYOTA Aygo</b> , 5-dr Hatchback, 05-14	<b>200</b>	<b>700</b>	<b>7 <sup>7</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

